


## Option 7: Auto / Manual Loading Station RT124

### Description

Signal entering the module on terminals 9 and 10 will go directly to the output terminals 6 and 7 when in auto mode.

When terminals 4 and 5 are joined the module enters manual mode. The output will follow the front dial from 0 to 100% of the specified output.

### Connection Diagram

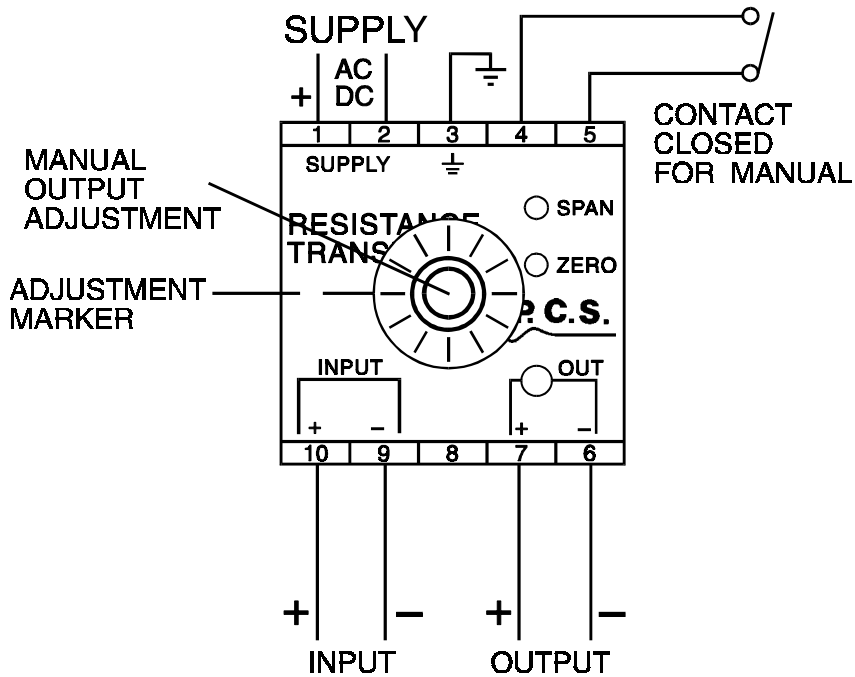

### Block Diagram

